

PureBook S14

**NOKIA**

# User Guide



intel

# Contents

1. Safety instructions, compliance & licenses	1
2. Product specifications	3
3. Product overview	4
4. Getting started: adapter, keyboard & touchpad	11
5. Useful guidelines	18
6. Warranty terms & conditions	22

# 1. Safety instructions, compliance & licenses

The unit can be operated at an ambient temperature of max. 35°C (95°F). Do not subject it to temperatures below 5°C (41°F) or above 40°C (104 °F)

Caution: Risk of explosion if battery is replaced by an incorrect type. Dispose off used batteries according to the instructions.

## **Prevention of hearing loss**

Listening to music at high volume levels and for extended durations can damage one's hearing. In order to reduce the risk of damage to hearing, one should lower the volume to a safe, comfortable level, and reduce the amount of time listening at high levels.

## **Caution**

Any changes or modifications not expressly approved by the guarantee of this device could void the user's authority to operate the equipment.

Do not apply heavy pressure to the laptop or subject it to any form of strong impact as this can damage the laptop's components or otherwise cause it to malfunction.

Never cover or block the air vents including those located at the base of the laptop. Never cover your laptop or AC adapter with any object.

 
To keep your laptop in prime operating condition, protect your work area from direct sunlight.

Do not expose to or use near liquid, rain, or moisture. Do not use the modem during electrical storms.

Do not use or expose this device around magnetic fields as magnetic interference may affect the performance of the device.

# This product is RoHS compliant

## Disposal of used electrical & electronic equipment

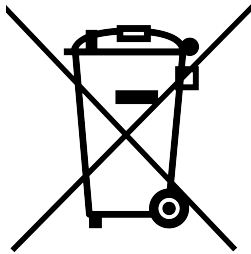

Packaging and electrical goods should be recycled appropriately, and not treated as household waste. Please dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipment waste. By ensuring the correct disposal of this product, you will help prevent potential hazard to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve

natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## Licenses



Dolby, Dolby Atmos and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright 2020 Dolby Laboratories. All rights reserved.



The adopted trademarks, HDMI, HDMI High Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



## 2. Product specifications

 
Model Number	NKi510TL85S	NKi511TL85S	NKi511TL165S
Form Factor	Ultra Thin & UltraLight		
Processor	Intel 10th Gen i5-10210U	Intel 11th Gen i5-1135G7	Intel 11th Gen i5-1135G7
OS	Windows 10* Home		
Screen Size & Resolution	14" HD 1366*768	14" FHD 1920*1080	
RAM	8GB DDR4	8GB DDR4	16GB DDR4
Storage	512GB SSD M.2		
Graphics	Intel® UHD Graphics	Intel® Iris® X Graphics	
Connectivity	Wireless LAN-IEEE 802.11a/b/g/n/ac		
Ports and Slot	USB 3.0x1 USB type C with full function x1 (Charging, Data Transferring and Display Port) HDMI 1.4 x1 Audio jack x1 TF card slot x1 3.5mm DC charging port x1		
Battery & Adapter	3 cells (3S1P, 3896mAh) 45Wh Input: AC 50/60Hz,57 Watts(19V/3A)		
Product Weight	1.4KG		
Product Dimensions	323.5*219.4*19.3mm		
Web Cam	1.0MP		
Trackpad	Precision Touchpad with multi-gesture support		

### Free upgrade to Windows 11 when available

Upgrade rollout plan is being finalized and is scheduled to begin late in 2021 and continue into 2022. Specific timing will vary by device. Certain features require specific hardware, see <https://www.microsoft.com/windows/windows-11-specifications>

### 3. Product overview

#### Top open view

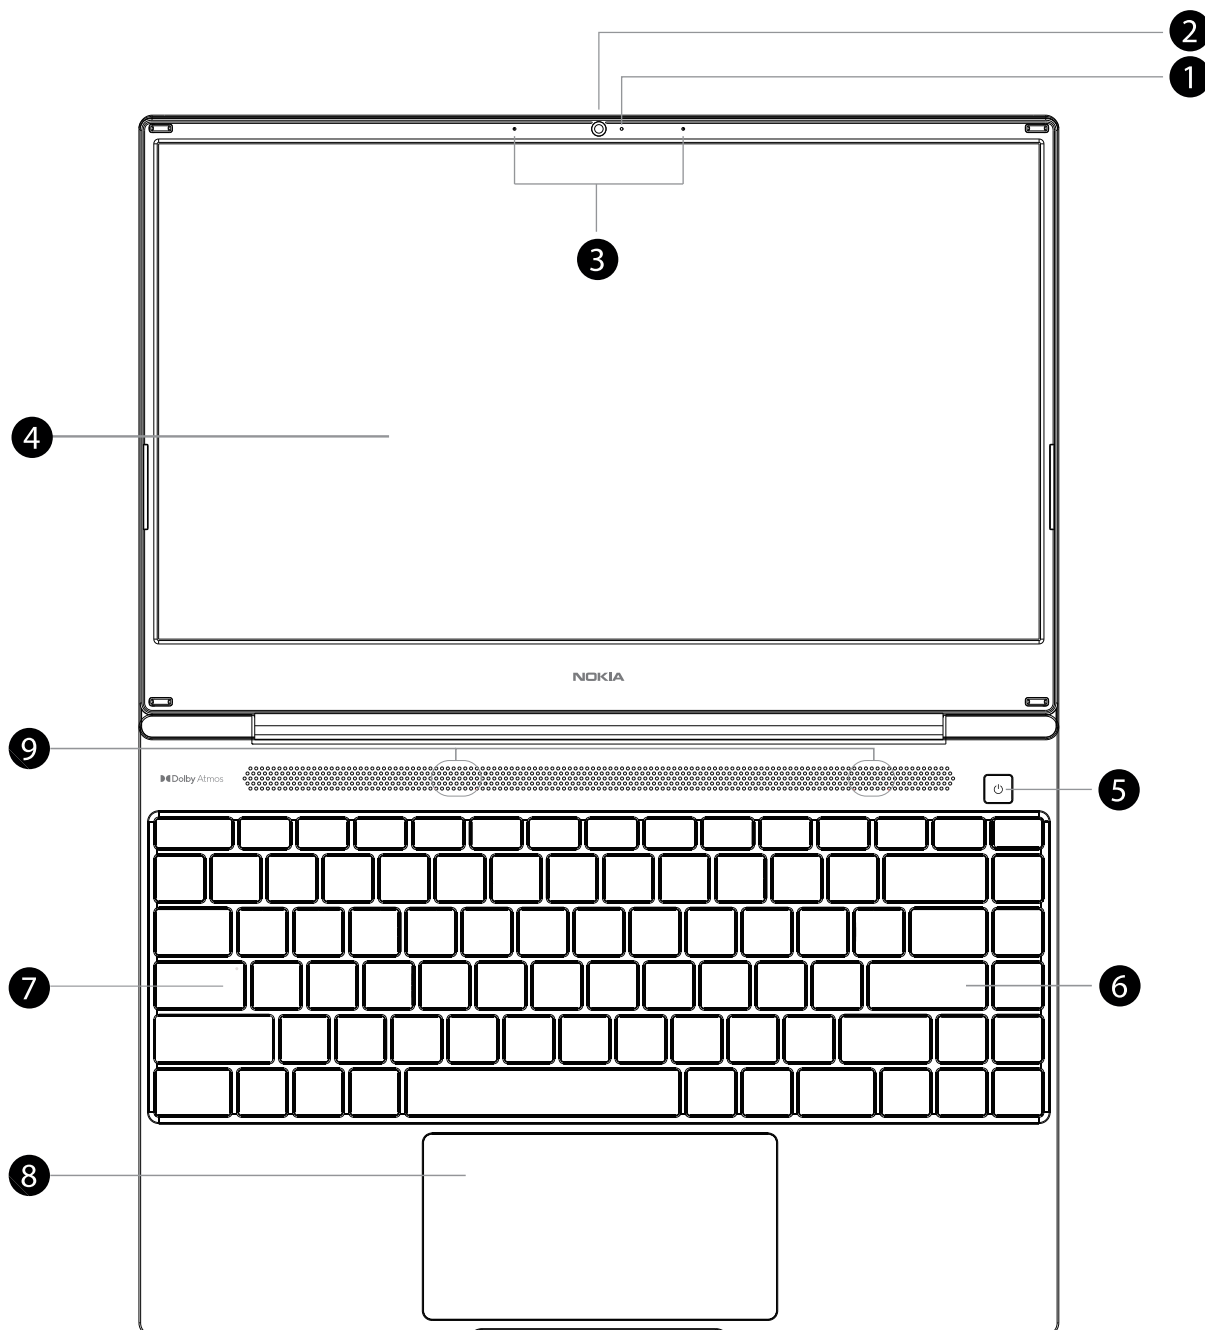

Caution: When you are not using the laptop , keep the LCD screen closed to protect it from dust.

**1. Camera status LED**

The camera status LED shows the camera status.

**2. Camera**

Allows you to record video or take photographs with your laptop.

**3. Microphone**

Built-in microphones.

**4. LCD Screen**

Display of your laptop.

This panel is made up of sub pixels which require sophisticated technology to produce. There may be, however, a few (upto 5) bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.

**5. Power button**

Press this button to turn the laptop's power on or off.

**6. Keyboard**

Membrane keyboard

**7. Caps Lock status LED**

 
Default: On (White)

**8. Touchpad/Click pad**

Touch-sensitive pointing device which functions like the mouse.


**9. Speakers**

## Right side view

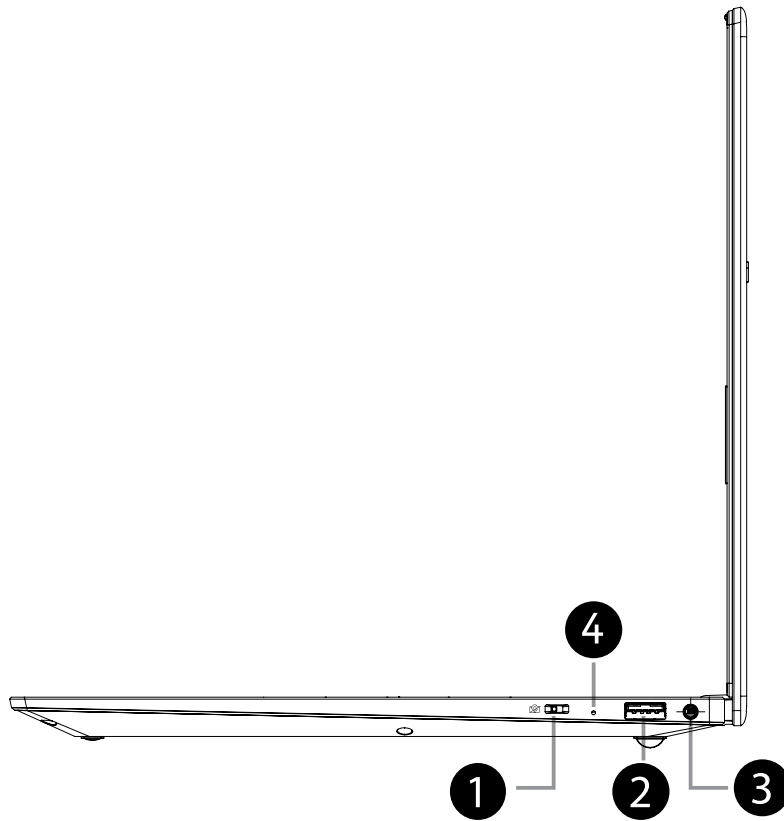


1. **Privacy shutter for camera & microphone**  
Slide this physical switch to open or close camera and microphone.
2. **USB port**  
Connects USB 3.0 devices such as USB Zip drive, keyboard or mouse into this jack.
3. **Audio jack**  
Connects amplified speakers, headphones or microphone into this jack.
4. **Privacy shutter indicator for camera & microphone**  
When the privacy shutter is turned on, the indicator light will glow.

## Left side view

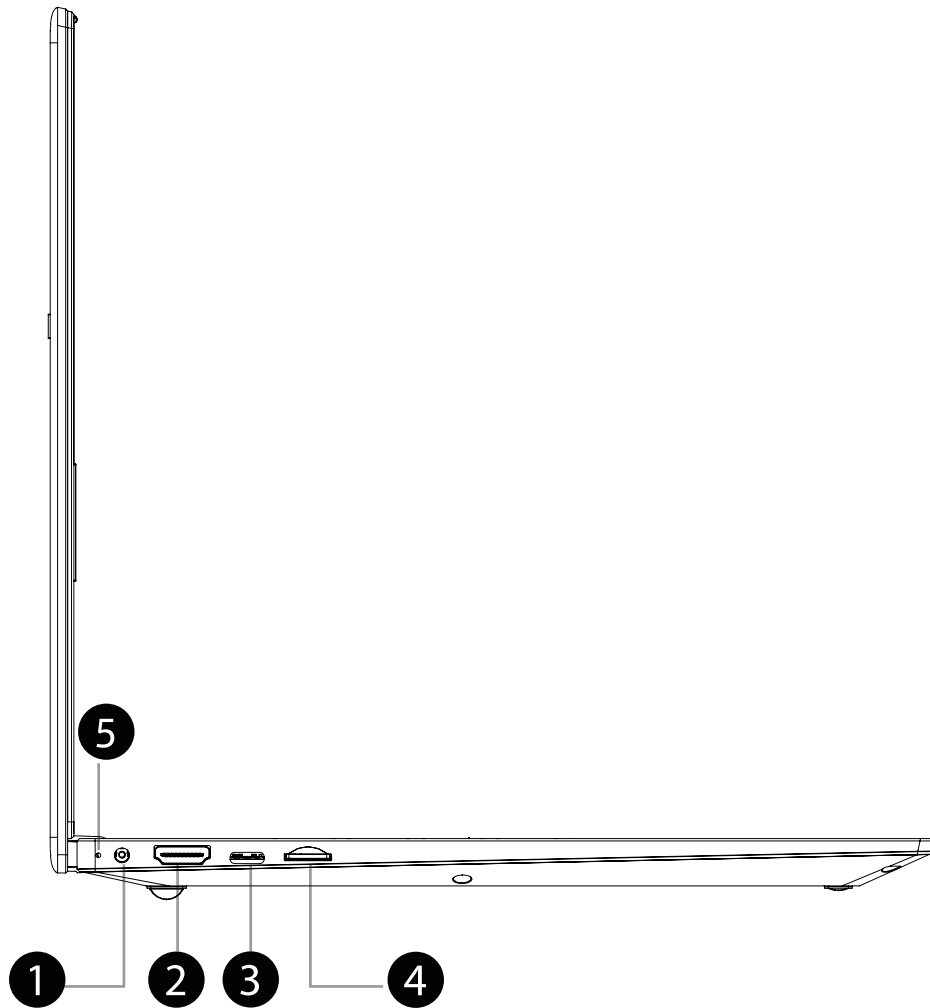 

1. **DC in jack**  
AC adapter connects into this socket.
2. **HDMI port**  
Connects to a screen, or a home theater system.
3. **USB Type-C**  
Connects USB C devices. It combines functions of charging, data transfer and display.
4. **TF card slot**  
Insert TF card for memory extension.
5. **Charging indicator**  
Indicator light will be turned on when connected with the AC adapter.

## Bottom side view

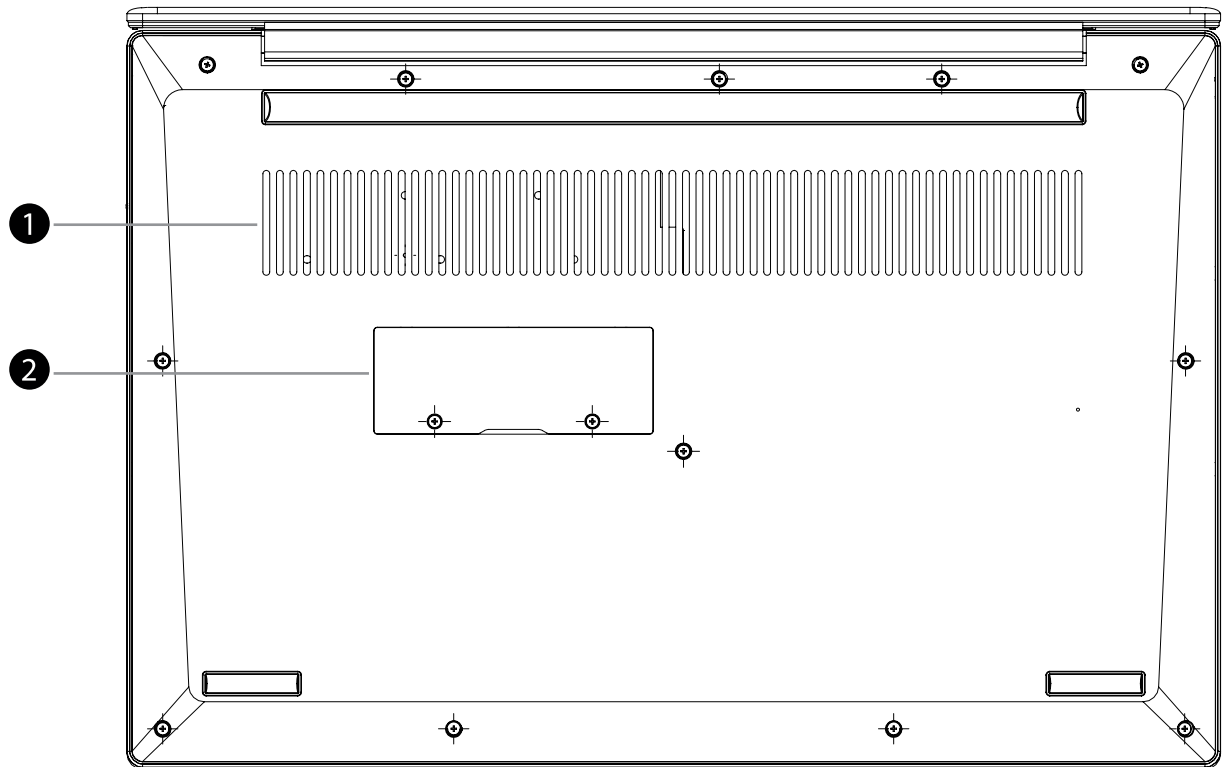 


### 1. Vents

Thermal vents are designed to cool the internal components and avoid overheating. Refer product for actual vent design.

### 2. SSD cover

Open the cover to install or remove SSD.

 Front side view

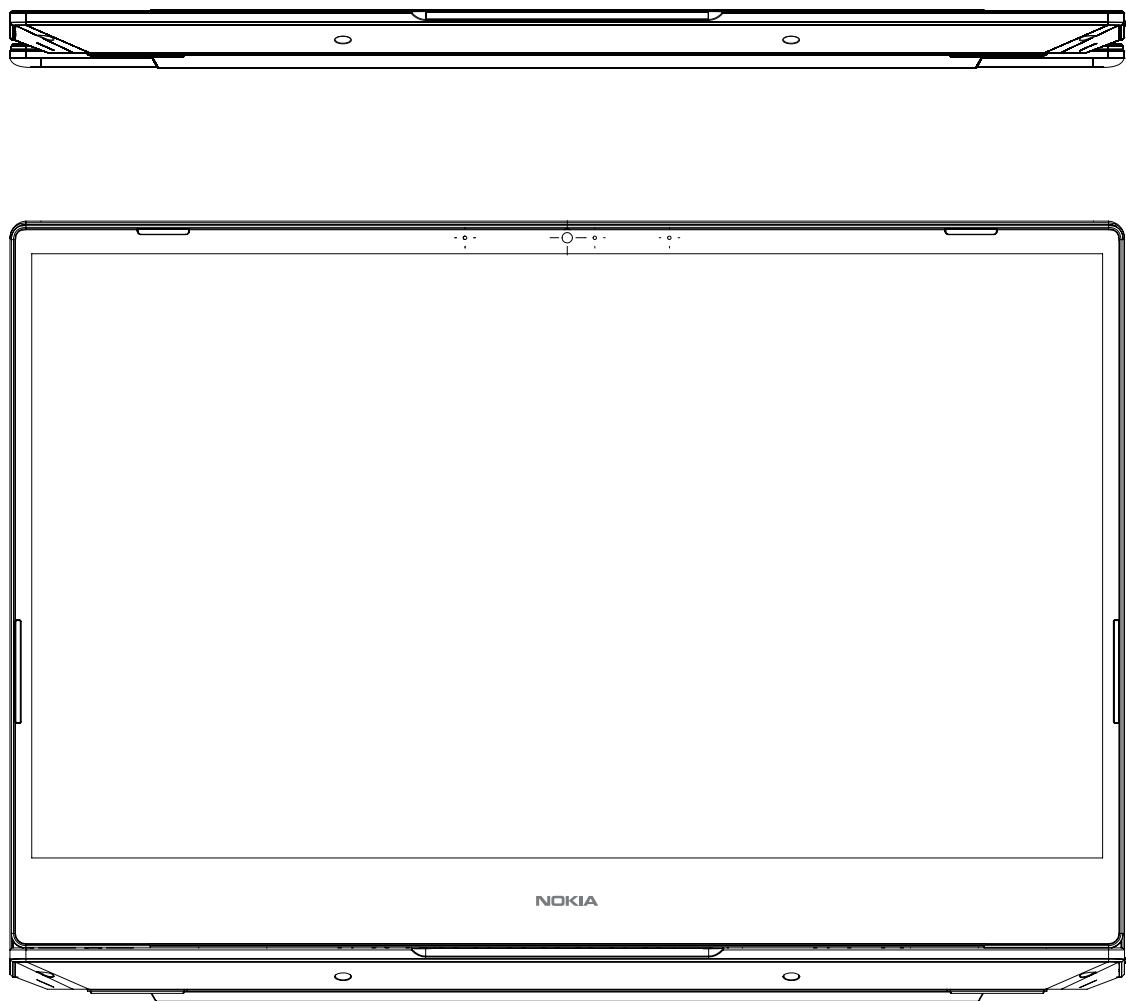





## 4. Getting started

### Preparing your laptop

 - a. Connect the AC adapter's output plug to the power socket.
- b. Open the display panel to your optimal viewing angle .

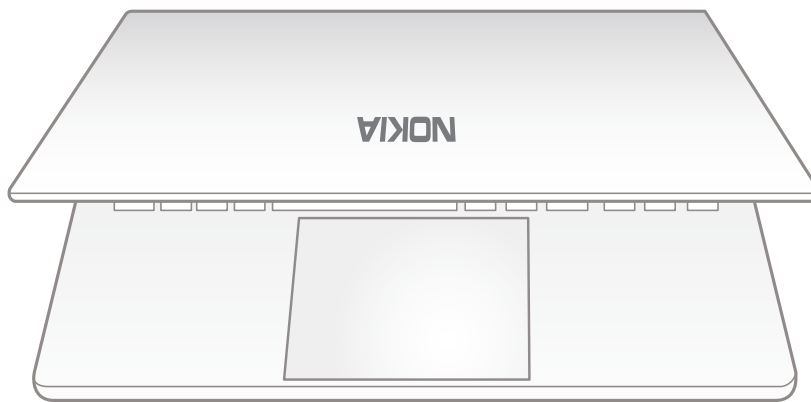

 - c. Press the power button to turn on your laptop.

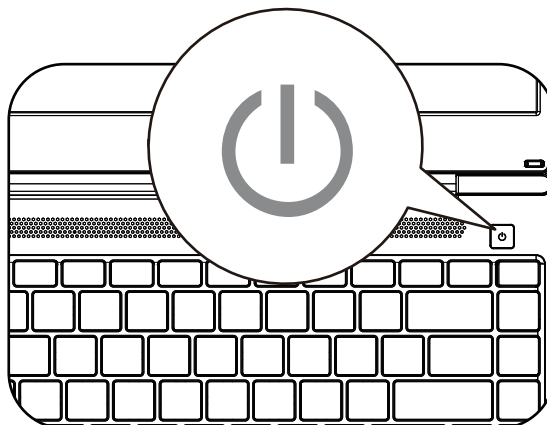


Please become familiar with each component before you operate the laptop .

## AC adapter

 Please note that it is strongly recommended to connect the AC adapter and use the AC power while using this laptop for the first time. When the AC adapter is connected, the battery will start charging immediately. Attach the AC adapter when you need to charge the battery or you want to operate from AC power. It is also the fastest way to get started, because the battery pack will need to be charged before you can operate from battery power.

Note that the AC adapter included in the package is approved for your laptop. Using other adapter models may damage either the laptop or other devices attached to it.

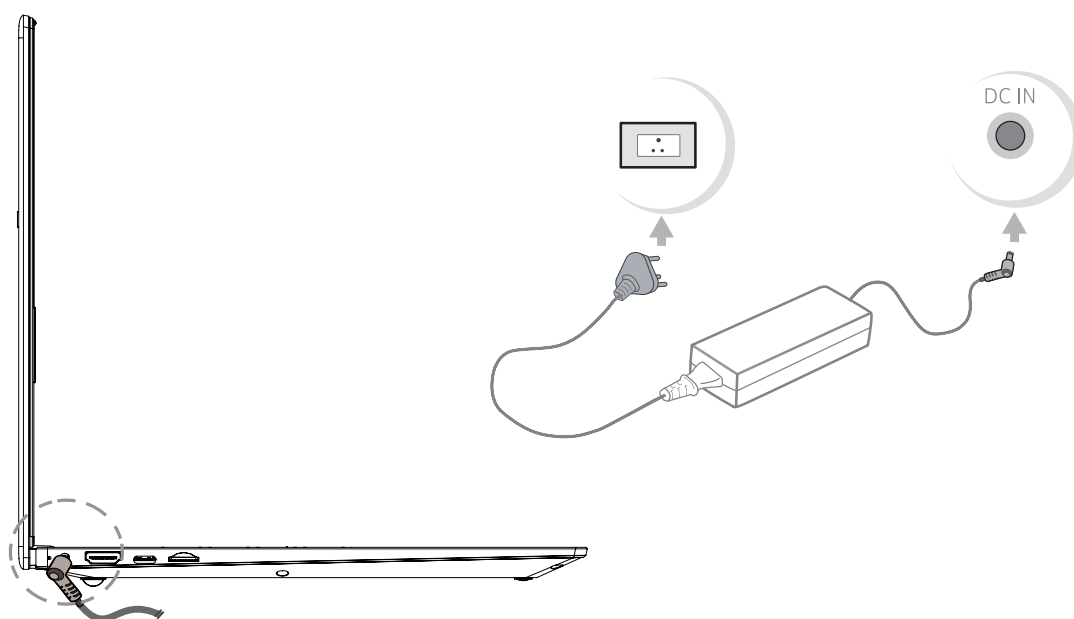


Caution: The use of inferior extension cords may result in damage to your laptop. Your laptop comes with its own authorized AC adapter. Use of a different AC adapter or cable extension which is not authorised for use will void warranty protection if damage to hardware is found in association to said adapter or extension cable.

 Note: The power adapter can become hot when in use. Please be sure the AC adapter is not covered with any materials and keep it away from exposed parts of your body. The AC adapter appearance may vary depending on your region.





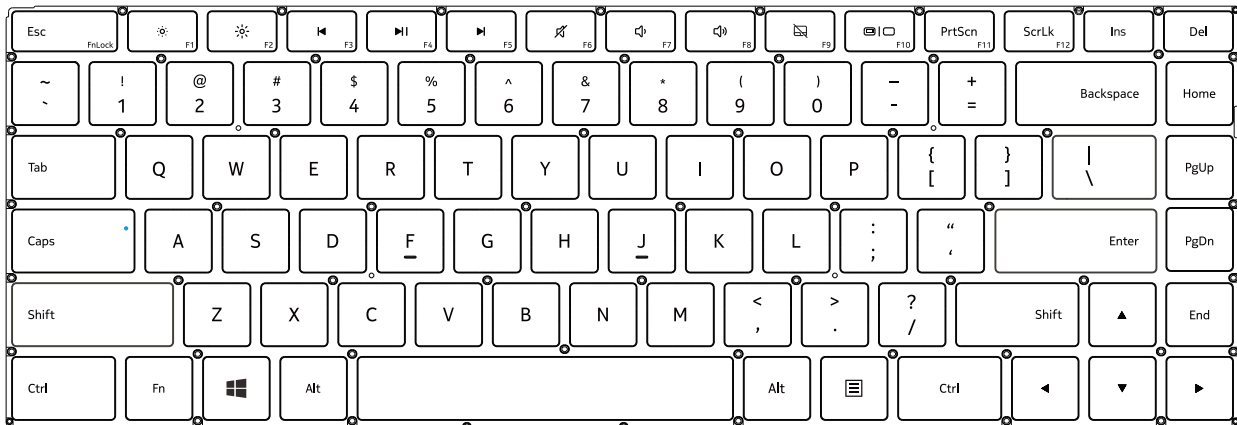

# Knowing the keyboard














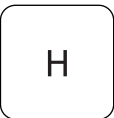


The following defines the coloured hot keys on the keyboard.  
The coloured commands can only be accessed by first pressing and holding the function key while pressing a key with a colored command.

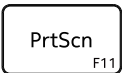

To activate these functions, press the hot key associated with the desired function as below:

## Function keys

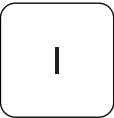 
Keypad	Function Description
 + 	Press this key combination (Fn+Esc) to enter function lock mode which will make F1 to F12 as primary functions of top row.
	Decrease screen brightness
	Increase screen brightness
	Play previous
	Play or pause media

 
Keypad	Function description
	Play next
	Mute media
	Decrease volume
	Increase volume
	Disable touch pad
	Toggle between display mode
	Print screen
	Scroll lock
 +  Search (Optional)	Press this key combination (Windows logo +Q) to open Search.
 +  Settings (Optional)	Press this key combination (Windows logo +I) to open Settings.
 +  Share (Optional)	Press this key combination (Windows logo +H) to open Share.
 +  Devices (Optional)	Press this key combination (Windows logo +K) to open Devices.

## Using the touchpad


The touchpad is a rectangular electronic panel located just below your keyboard. You can use the static-sensitive panel of the touchpad and slide it to move the cursor.

Press the Left (1) and Right (2) buttons located on the edge of the touchpad to make selections and run functions. These two buttons are similar to the left and right buttons on a mouse. Tapping on the touchpad produces similar results.

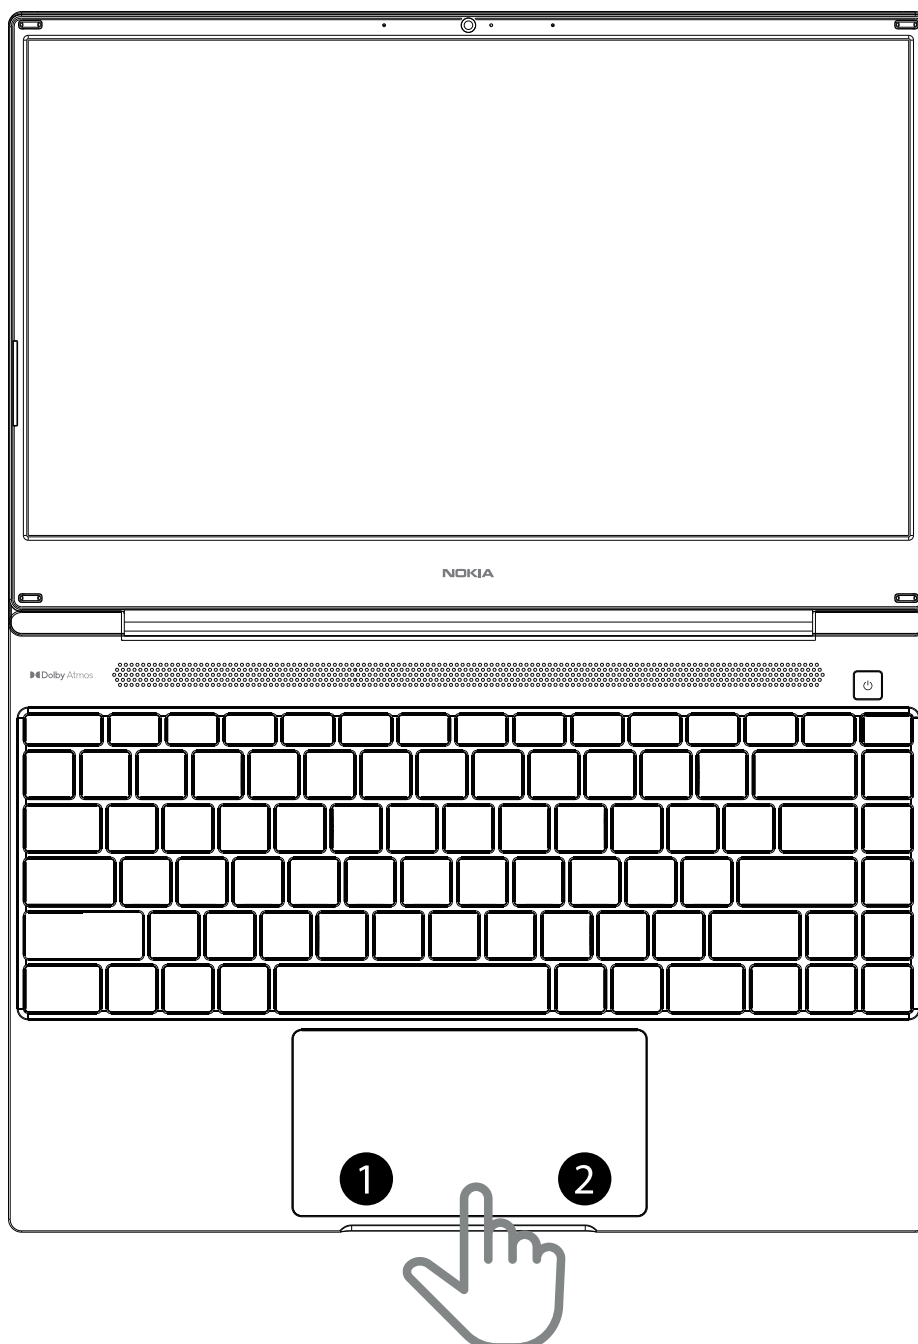

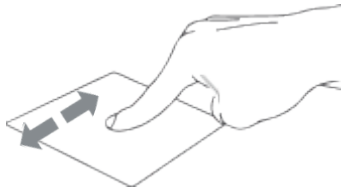

Slide horizontally

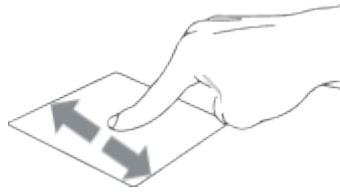 

Slide vertically



Slide diagonally



 
Left click on an app to select it.  
double click on it to launch.




Right click to open right click menu.




Two finger tap  
to simulate the right  
click function

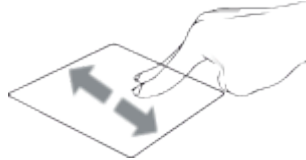

 
Two finger scroll (Up/Down)  
Slide two fingers up or down  
to scroll

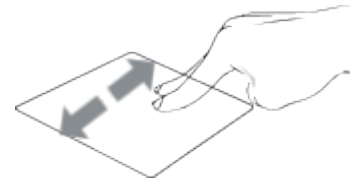

 Two finger scroll (Left/Right)  
Slide two fingers left or right  
to scroll

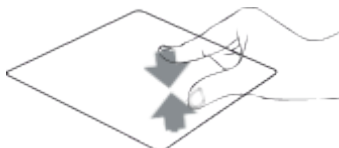

 Zoom out  
Bring together two  
fingers to zoom out

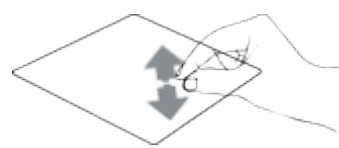

Zoom in  
Spread apart your  
two fingers to zoom in



**Two fingers drag and drop**  
Select an item and press & hold the left button, using your other finger to slide on the touchpad to drag the item



**Three fingers swipe left/right**  
Swipe 3 fingers left or right to switch between the apps



**Three fingers swipe up**  
Swipe three fingers up to open task view



**Three fingers swipe down**  
Swipe three fingers down to show desktop



# 5. Useful guidelines

## Activating Windows:

- The laptop comes with pre-installed Windows-10 Home lifetime license. Customer needs to connect to the internet and activate Windows 10 through system settings after receiving the product.
- If windows is not activated : Go to Control Panel --> System and Security-->Systems click on "Activate Windows" on bottom right , click on troubleshoot & the Windows will be activated in 1-2 minutes.

## Charging the laptop:

- Please charge your laptop fully before using it for the first time.
- Connect the DC plug on the supplied power adapter to the charging socket on the laptop. Then plug the power adapter into a socket.
- The charging LED light will be white while the device is charging.

## Turning on the laptop for the first time:

- Bring the screen upwards until it is standing at a minimum angle of 90° to the keyboard.
- Connect device with adapter for charging, press the Power button to switch on the laptop. The setup assistant will then appear on the screen.
- Follow the setup assistant instructions to set up your laptop.
- During the startup, the wizard prompts you to register for your Microsoft account. If you do not yet have a Microsoft account, please set one up at [account.microsoft.com](https://account.microsoft.com).

- After completion of the startup, your laptop is being configured. This process may take several minutes to complete. Do not turn the laptop off during this time.

## Unlocking the display :

- As soon as the device has been set up (and every time it is subsequently switched on and booted up), the lock screen appears, press any key on the keyboard to unlock the screen.
- If your laptop is password-protected, you must then enter the password.

## Start menu :

- To display the start menu, click the Windows icon in the bottom left of the display or press the Windows button on the keyboard. Press the icon a second time to hide the Start menu.
- The Start menu consists of the classic navigation list and a useful app area to the right of the navigation list.
- Among other things, the navigation list includes a link to open Settings (cog wheel icon). In the app area, you can pin apps and favorites in the form of live tiles and organize them.
- In the navigation list (A) you find a list of all installed apps in alphabetical order. An alphabetic quick access to the navigation list appears when you click on a respective first letter.

## The Action Center :


- The Action Center is a bar with quick links to some important laptop functions, which you can either display or hide.
- To access the Action Center, click the memo symbol in the bottom right-hand corner.

## Activating Wi-Fi and opening the browser:

- a. Click on Settings (see “Start menu”).
- b. In the Settings, click “Network & Internet”.
- c. Click “Wi-Fi” on the left in the next screen.
- d. Click the slider or the word “Off”. The word “On” now appears next to the slider.

The laptop searches for all available wireless networks nearby and then displays them as a list (“Show available networks”).

- e. Click the network that you wish to connect to.
- f. Enter the network key (password) if necessary.
- g. Click “Connect”. The laptop connects to the selected network.

You can also click network icon  on the task bar at the right bottom of the display to setup Wi-Fi.

The button for launching the Internet browser can be found on the task bar at the bottom of the display. Click the little blue “e” to launch the browser. To enter an Internet address (URL), click the search bar displayed centrally at the top of the window.


## Reset

- If the Laptop “freezes” and no longer responds, you can reset it. Press and hold Power button until the power indicator turns off. Wait for about 20 seconds and then turn on the laptop normally.
- Any files that have not been saved will be lost when the laptop is reset.

## Standby

Briefly press the Power button on the device to activate the standby mode. Press it again quickly to take the laptop out of standby mode.

## Shutting down

Open the Start menu. Click “” in the bottom area of the Start menu and then tap “shut down”. The laptop shuts down.

## Saving energy

- Deactivate the Wi-Fi function when it is not in use.
- Always disconnect the power adapter from the laptop when you are not charging the laptop.
- Reduce the display brightness.
- Activate standby mode or turn off the laptop completely if you are not using the laptop.

## Taking a full backup of a Windows 10 PC on an external hard drive:

Step 1: Type 'Control Panel' in the search bar and then press <enter>.

Step 2: In System and Security, click "Save backup copies of your files with File History".

Step 3: Click on "System Image Backup" in the bottom left corner of the window.

Step 4: Click on the button "Create a system image".

Step 5: Choose your hard drive and click Next.

Step 6: Click "Start backup" to start the backup process.

The backup wizard could take from 10 minutes to several hours, depending on the amount of data that needs to be backed up and the speed of the hard-disk.

## 6. Warranty terms & conditions:

Flipkart India Private Limited ("Company") warrants the product to be free from manufacturing defects or any other specific defect as may be specified in the Specific Terms and Conditions below. The warranty is for a period mentioned in the Specific Terms and Conditions below, the invoice (if not specified in the Specific Terms and Conditions below), as well as the product listing page, and such period shall commence from the date of purchase of the product by the first end user. This is a non-transferable warranty, valid only in the territory of India and extended only to the first end user customer ("Customer") basis the following terms and conditions, which the Customer is deemed to have accepted upon purchase of the product:

1. The warranty period of the product is 1 year, commencing from the date of purchase, Warranty service which includes replacement or repairs, will be carried out through the Authorized Service Centers ("ASC/s") only.
2. Warranty will be valid only when the original purchase invoice is presented at the time of service. Company reserves the right to decline warranty service, if the purchase invoice is not presented.
3. In case of commercial usage of the product, warranty period would be limited to 90 days only.
4. Warranty will cover only functional parts, issues having manufacturing defects and does not cover damage to the product resulting from unauthorized adaptations/ adjustments/ tampering/repair, improper installation or placement, mishandling, improper use, deviation from the instructions set out in the user manual (if applicable) normal wear and tear caused due to the use of the product. In case of Expandable RAM & Storage , the installation should be carried out through the Authorized Service Centers ("ASC/s") only. The cost of installation will be chargeable as per the approved rate card.
5. Warranty does not cover any external accessories (Other than charging adapter) and fittings to the product.
6. All plastic, rubber, glass, or aesthetic parts and consumable replacements will be on a chargeable basis.
7. Warranty shall not apply to damages caused to the product by accident,

voltage fluctuations, lightening, ingress of water (beyond certified limits, if any), fire or any other natural calamity, improper ventilation, dropping or excessive shock, or any external cause beyond Company's control.

8. Company shall retain all products or spare parts which are replaced and the ownership of the same shall vest with the Company.

9. Company is not liable to provide repair services or spare parts after the period of warranty expires and the same if provided will be on a chargeable basis.

10. Whilst the Company, through its ASC, shall make every effort to carry out the service at the earliest, it is expressly clarified that the Company is under no obligation to do so within a certain time period.

11. Whilst Company would take all necessary steps to repair the product under warranty and maintain sufficient stock of spare parts of the products, in certain cases, at its sole discretion, Company may due to non-availability of spare parts of the product or product being in a state which is beyond economic repair, offer a replacement scheme to the Customer. The terms of such replacement offer is subject to change from year to year and shall also be applicable on the maximum retail price of the product.

12. All transportation & handling expenses incurred while replacing or repairing will be payable by the Customer.

13. For any warranty claim requested by the Customer from the region beyond municipal limits of the jurisdiction of the ASC, a visit by an authorized service personnel may be arranged by the Company through its ASC, on a case to case basis, at its sole discretion and the charges towards such visit will be borne by the Customer.

14. Warranty shall be void if:

1. The type or serial no. on the product has been altered, removed or defaced.

2. The product is not operated as per the instructions given in the User Guide, if any.

3. The defects are caused by household pets, rats, cockroaches or any other animals or insects.

15. The warranty automatically expires after the period of time stated in the product invoice even if the product may not be in use for any time for

whatever reasons.

16. This Warranty shall not affect Customer's statutory rights under any applicable law.

17. Customer agrees to indemnify and keep Company harmless against all damages, liabilities, costs, expenses, claims, suits and proceedings (including reasonable attorney's fee) that may be suffered by the Company as a consequence of: (i) violation of these terms and condition by the Customer; (ii) violation of applicable laws by the Customer; (iii) any action or inaction resulting in willful misconduct or negligence on the Customer's part.

18. In the event of repairs of any part(s) of the product, the Warranty will thereafter continue and remain in force only for the unexpired period of the Warranty. Moreover, the time taken for repair and in transit whether under the Warranty or otherwise shall not be excluded from the Warranty period.

19. None of the employees, sellers, dealers or ASCs of the Company have the authority to vary these terms and conditions.

20. Customer agrees that the courts at Bangalore shall have the exclusive jurisdiction to settle any dispute that may arise in relation to this Warranty or these terms and conditions.

21. Company shall not be liable for any indirect, special, punitive, exemplary, speculative or consequential damages, including, but not limited to, any loss of use, business interruption, and loss of income or profits, irrespective of whether it had an advance notice of the possibility of any such damages.

22. For any further information / assistance please contact our customer Redressal cell at:

Flipkart India Private Limited  
Building Alyssa, Begonia & Clove  
Embassy Tech Village, Outer Ring Road  
Devarabeesanahalli Village  
Bangalore, Karnataka - 560103, India  
Tel. no. : 080-46331010  
Email: support.nokia@flipkart.com





1.4Kg Ultralight



512GB



8GB/16GB DDR4



14" Display



Slim bezels

Flipkart India Private Limited is a licensee of the Nokia brand in India.  
Nokia is a registered trademark of Nokia Corporation.