



Music			—
			—
			— 2s
			— 2s
			—
			—
Call			—
			—
			— 2s
			— 2s
			—
			—
Voice Assistant			— 2s
			— 2s

* Controls are only applicable in Wireless mode.

Nokia Headset T4010

Wearing style	: Wireless Headphones
Ear coupling	: Circumaural
Frequency response	: 20 Hz to 20kHz
Transducer principle	: Dynamic, closed
Transducer size	: 40mm
Sound pressure level(SPL)	: 106dB(1kHz/ 1mW)
Impedance	: 32Ω
Microphone principle	: ECM x1
Power supply	: Built-in Lithium rechargeable batteries, 3.7V, 500mAh
Operating time	: 40 hours (music playback via A2DP)*
Charging time	: Approx. 3 hours
Weight	: Approx. 197g
Volume Control	: Yes

Wireless Profile

Version	: Wireless specification version 5.0
Profiles	: HFP, AVRCP, A2DP
Effective Range	: Line of sight approx. 30ft (10m)
Transmission frequency	: 2402 MHz to 2480 MHz
Supported Audio Format(s)	: SBC

* Battery life depends on device settings, environment, usage and many other factors.

Problem	Reason	Solution
Does not power on / Does not respond	Battery is low	Charge the headphones for 2 - 3 hours and restart the headphones
No sound after pairing	Incorrect pairing	Pair the headphones again or reset the headphones
Turns off automatically	Battery is low	Charge the headphones for 2-3 hours
Red light flashes on headphones	Battery is low	Charge headphones
Failing to charge	Error with power supply	Perform a hardware reset
No light when charging	Error with power supply	Check charging cable is plugged in and ensure that it is switched on
Hearing an echo	Volume is too loud or the environment is too noisy	Adjust the volume or change your location
Noise in-call	Noisy environment or distance between earphones and mobile phone is too far	Change your location or bring your earphones and mobile phones closer together
Sound occasionally drops	Environmental interference or out of Wireless transmission range	Change location with less signal interference or reduce the distance between the headphones and devices
Sound is too soft	Low volume	Increase the volume

Important safety instructions

- Read the user guide & warranty manual (as supplied) carefully and completely before using the product.
- Always include this safety guide when passing the product on to third parties.
- Do not use an obviously defective product.
- Use only the product in environments where wireless transmission is permitted.



Preventing damage to health and accidents

- Do not listen at high volume levels for long periods of time to prevent hearing damage.
- The product generates stronger permanent magnetic fields that could cause interference to cardiac pacemakers, implanted defibrillators (ICDs) and other implants. Always maintain a distance of at least 3.94" (10cm) between the product component containing the magnet and the cardiac pacemaker, implanted defibrillator or other implant.
- Keep the product, accessories and packaging parts out of reach of children and pets to prevent accidents. Swallowing and choking hazard.
- Do not use the product in an environment that requires your special-attention (e.g. in traffic).

Preventing damage to the product and malfunctions

- Always keep the product dry and do not expose it to extreme temperatures (hairdryer, heater, extended exposure to sunlight, etc.) to avoid corrosion or deformation. The normal operating temperature is from 0 °C to 40 °C/32 °F to 104 °F.
- Use only attachments, accessories, spare parts supplied or recommended by Flipkart.
- Only clean the product with a soft, dry cloth.



Safety instructions for lithium rechargeable batteries

WARNING
In extreme cases, rechargeable batteries may leak and may cause the following hazards if abused or misused:
explosion · fire development · heat generation · smoke or gas development



Dispose of defective products with built-in rechargeable batteries at special collection points or return them to your specialist dealer.



Only use rechargeable batteries recommended by Flipkart and the appropriate chargers.



Only charge the product / rechargeable batteries at ambient temperatures between 10°C/50°F and 40°C/104°F.



Switch battery pack-powered products off after use.



When not using for extended periods of time, recharge the product / rechargeable batteries regularly (about every 3 months).



Do not heat the product / rechargeable batteries above 70 °C/158°F. Avoid exposure to sunlight and do not throw the product / rechargeable batteries into fire.

Intended use/Liability

Flipkart will not be responsible for any indirect or consequential loss, loss of profits or loss of data.
Please refer to the warranty card for details.

Manufacturer Declarations

More information on legal compliance labels can be found at bottom.



Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Electrical and electronic products contain a lot of valuable materials, including metals (such as copper, aluminum, steel, and magnesium) and precious metals (such as gold, silver, and palladium). All materials of the device can be recovered as materials and energy. The crossed-out wheellie bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products and batteries must be taken to separate collection at the end of their working life. Do not dispose of these products as unsorted municipal waste: take them for recycling. For info on your nearest recycling point, check with your local waste authority.

